

CLINICAL PRO SERIES


EXAM TABLE INSTALLATION INSTRUCTIONS

PACKAGING INSTRUCTION SHEET



Hardware Supplied

Qty



2

“L” Bracket



8

1 1/4” Wood Screw



4

1 3/4” Wood Screw




4

2” Wood Screw




4

5/8” Pan head Screw

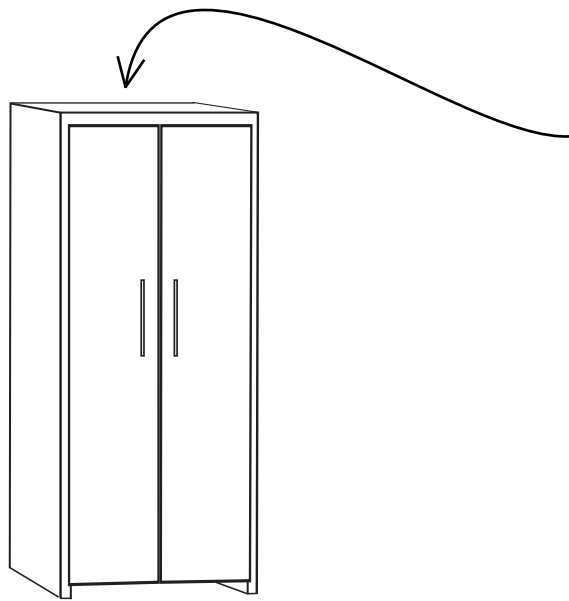

Attach label to center back of cabinet top.

WARNING!
THIS CABINET MUST BE ANCHORED EITHER TO THE STUDS IN YOUR WALL USING "L" BRACKETS OR TO THE SIDE OF THE WALL-BED UNIT. FAILURE TO PROPERLY ANCHOR CABINET WILL ALLOW THE CABINET TO TIP OVER AND MAY CAUSE SEVERE PERSONAL INJURY.
CALL 866-725-6401 FOR MORE INFORMATION

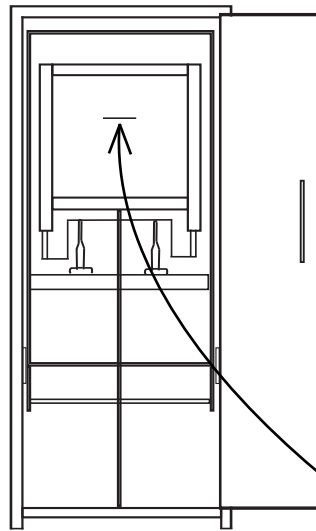

Tie hang tag to the handle. Place blue tape at bottom to hold in place with words showing.



Warning!
DO NOT OPEN THIS EXAM TABLE UNTIL THE CABINET IS PROPERLY ANCHORED. ATTEMPTING TO OPEN PRIOR TO PROPER ANCHORING WILL CAUSE THE CABINET TO TIP OVER.